

## **MASTER PASSWORD FOR C1, M1, M3, M4, M5, X1, X3, X5 Q1, Q3, and Q5**

1. From "Operator mode" press "left" key until the display shows PASS
2. Enter the code 0311, press "Enter" key.
3. The controller goes back to the operator mode.
4. press "left" key until the display shows PASS
5. Enter the code 1961, press "Enter" key.
6. The controller accesses to the configuration area. Now it is possible to modify the configuration and all the parameters present in that area including the Password ("Code" parameter)

**For the M5, X5, and Q5, follow the above procedure from the ACCESS LEVEL menu.**