

**ASCON spa**  
 20021 Bollate (Italy)  
 Tel. +39 02 333 371  
 Fax +39 02 350 4243  
 www.ascon.it  
 sales@ascon.it



## mod. IO-CB/DM-32TS-00

M.U. IO-CB/DM-32TS-1/04.9  
 Cod. J30-478-1ADM-32TS E

# User manual

### Contents

- Characteristics
- Functional Block Diagram
- PDOs used by the module
- Hardware Set-up
- Parameter configuration
- Commands
- Emergency messages
- Parameter Store/Restore
- Object Dictionary

## CANopen I/O module 32 Digital Channels 16 Input + 16 output mod. IO-CB/DM-32TS-00



- 16 optoisolated digital inputs with edge detect and interrupt special functions and
- 16 optoisolated digital outputs

### APPLICABLE STANDARDS

The DM-32TS module is suited for the CiA DS301 protocol [1] and implements the CiA DS401 standard Device Profile [2].

### WARNING

The product described in this manual should only be installed, operated and maintained by qualified application programmers and software engineers who are familiar with automation safety concepts and applicable national standards.

### Characteristics

#### Technical data

#### Inputs

Number of channels	16
Polarity (EN 61131-2 type 2)	Sink (PNP)
UL (state 0)	-3...11/5 Vdc
UT (transition)	5...11 Vdc
UH (state 1)	11...30 Vdc
Input impedance	5 kΩ
ON/OFF delay	< 5 ms

#### Outputs


Number of channels	16
Polarity (High side)	Source (PNP)
Output Voltage (nominal)	24 Vdc
Output Current	0.5 A
Max. output current (total)	8A (continuous)
ON/OFF delay	< 5 ms

### General

3 way isolation	Channel to Channel	800 Vp [1]
	Channel to Logic	800 Vp
	Logic to Serial Bus	800 Vp
	Power Supply to Logic	800 Vp
Power supply	24 Vdc; -15...+25%	
Power consumption	3 W	
Oversvoltage protection	40 Vdc	
Dimensions	L: 152; H: 110; W: 65	
Weight	350 g	
Safety regulations	<b>Isolation class II</b> (50Vrms), Installation category II, Pollution degree 2	
CE marking	EN61131-2	

### 3 way isolation diagram

- 1) Two separated groups of 16 channels each

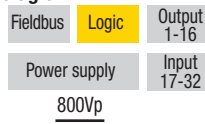


### Environment


	Operating	Storage
Temperature	-10...+65°C	-40...+85°C
Relative Humidity	5...95% non condensing Appropriate measures must be taken against humidity >85%	5...95% non condensing For a short period, slight condensation may appear on the housing
Mounting	Vertical, free air	
Protection	IP20	
Vibrations (3 axes)	10...57Hz 0.0375mm 57...150Hz 0.5g	
Shock (3 axes)	15g, 11ms half sine	

### Functional Block Diagram

#### For each input

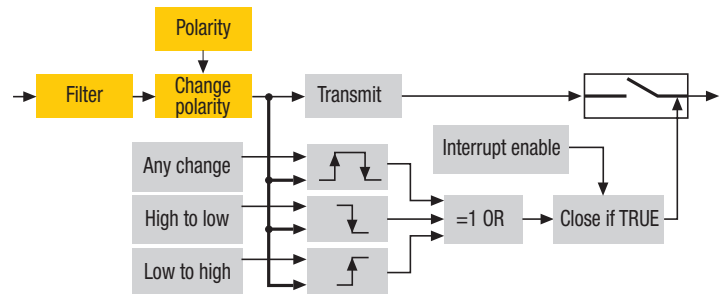

#### For each output

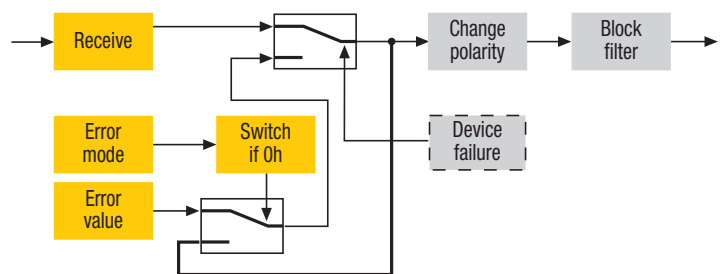

### PDOs used by the module

TPDO used by the input channels of the module

TPDO	Properties	Mapped objects	Index	Sub-index
TPDO1	COBID: 180h+ NodeID Transmission Type: FFh	DigInput8_1 DigInput8_2	6000h 6000h	01h 02h


RPDO used by the output channels of the module

RPDO	Properties	Mapped objects	Index	Sub-index
RPDO1	COBID: 200h+ NodeID Transmission Type: FFh	DigOutput8_1 DigOutput8_2	6200h 6200h	01h 01h

**Note:** The transmission type is configurable; FFh is the default value.

## Hardware Set-up

### Hexadecimal rotary switches, service and I/O LEDs

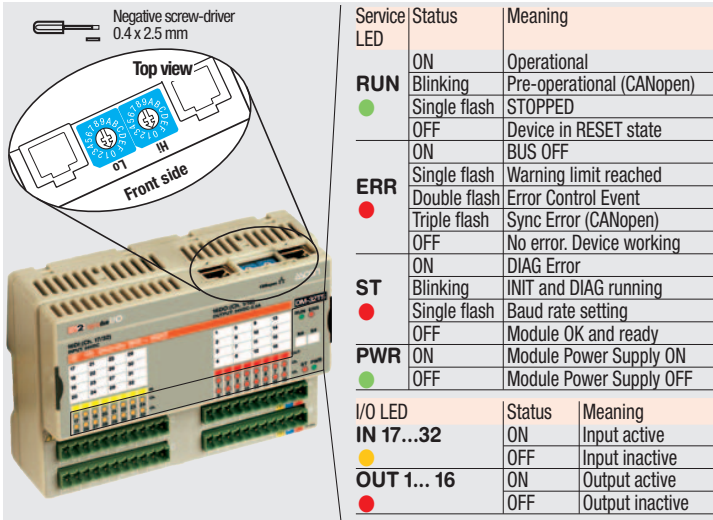

Service LED	Status	Meaning
RUN	ON	Operational
	Blinking	Pre-operational (CANopen)
	Single flash	STOPPED
	OFF	Device in RESET state
ERR	ON	BUS OFF
	Single flash	Warning limit reached
	Double flash	Error Control Event
	Triple flash	Sync Error (CANopen)
ST	OFF	No error. Device working
	ON	DIAG Error
	Blinking	INIT and DIAG running
	Single flash	Baud rate setting
PWR	ON	Module Power Supply ON
	OFF	Module Power Supply OFF
I/O LED	Status	Meaning
	IN 17...32	ON
OUT 1... 16	OFF	Input inactive
	ON	Output active
	OFF	Output inactive
	ON	Output inactive

### Bit Rate and Node ID configuration

#### Bit rate

Lo switch	Baud rate kbps	Bus length m
1	20	2500
2	50	1000
3	100	500
4	125	500
5	250	250
6	500	100
7	800	50
8	1000	25

#### Node ID

Hi switch	Lo switch	Valid Node ID
0	1	01h (address 1)
0	2	02h (address 2)
↓	↓	↓
7	F	7Fh (address 127D)

### Procedure for Node ID and Bit Rate configuration

The HI and LO hexadecimal rotary switches set the module's Bit Rate and CAN Node ID. During the configuration, the module must be **off line** and the CAN bus must be physically disconnected. To configure the module, follow the procedure:

- 1 Turn the Power OFF
- 2 Set the **HI** switch to "F"
- 3 Select the desired Bit Rate value by setting the **LO** switch following the table (e.g. "8" for 1 Mbps)
- 4 Turn the Power ON
- 5 Shift the **HI** switch to "E" (all the module service LEDs should flash)
- 6 Turn the Power OFF. Now configure Node ID
- 7 Set the **HI** and **LO** switches to the desired valid Node ID following the table
- 8 Turn the Power ON.

Alternatively, at step 7 set the value 00h. Then, at the next Power ON, the last valid stored value will be resumed as Node ID.

The default values are: Bit Rate = 20 kbps, Node ID = 127D

## Parameter configuration

### Configuring the input channels

The functional block diagram for the Inputs is consistent with the standard profile CiA DS401 [2].

The digital signal is first filtered (**Index 6003h – Filter Constant Input 8-bit** and **Index 2004 – Filter Constant**), then polarised (**Index 6002 – Polarity Input 8-bit**) and finally assigned to the variable that contains its value (**Index 6000h – Read Input 8-bit**). The information is now ready to be transmitted on the CAN network via the TPD01.

Other entries determine the trigger condition:

**Index 6006h – Interrupt Mask Any Change 8-bit:** detection of any input level change

**Index 6007h – Interrupt Mask Low-to-High 8-bit:** detection of a Low-to-High edge

**Index 6008h – Interrupt Mask High-to-Low 8-bit:** detection of a High-to-Low edge

**Index 6005h – Global Interrupt Enable:** the actual PDO transmission is performed if two initial conditions are met: the variable in Index 6005h should be "TRUE" and the PDO transmission type should be 255.

## Configuring the output channels

The Output functional block diagram is consistent with the standard profile CiA DS401 [2].

The output signalling from a CAN message is processed first. Two pre-process items are performed:

### • Polarisation Index 6202h – Polarity Output 8-bit

This object defines the polarity of a group of 8 output lines. Output polarity can be inverted individually:

- 1 = output inverted,
- 0 = output not inverted

If the object is not supported, the device behaves according to the default value.

### • Masking Index 6208h – Filter Mask Output 8-bit

This object defines an additional output filter mask configurable for a group of 8 outputs.

- 1 = output is set to the received output value
- 0 = don't care, the received output value is neglected for the corresponding output channel and the old output value is kept.

If the object is not supported, the device behaves according to the default value.

## Error mode

In error mode, the outputs behave according to the following two entries

### Index 6206 – Error Mode Output 8-bit

This object indicates, whether an output is set to a pre-defined error value (see 6207h object) in the event of an internal device failure or of a 'Stop Remote Node' status.

- 1 = output value takes the pre-defined condition specified in object 6207h
- 0 = output value is kept if an error occurs

### Index 6207h – Error Value Output 8-bit


On condition that the corresponding Error Mode is active, device failures set the outputs to the value configured by this object.

- 0 = Output is set to '0' in case of fault, if object 6206h is enabled
- 1 = Output is set to '1' in case of fault, if object 6206h is enabled

## Commands

### Index 200Ch – Operating mode

The device has its own internal state machine. It is possible to move through this by sending appropriate values to the Index 200Ch, following the table below.

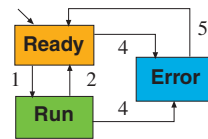


Transition	Operating mode value	Behaviour
Init	-	At Power-Up, the Device is in the "ready" state. Transition 1 is also executed if Index 200Ch - Operating Mode contains the default value 1
1	01h	Operating mode "RUN" is activated
2	00h	Return to the initialisation "ready" state. The transition is performed: <ul style="list-style-type: none"> <li>• following an operator's command</li> </ul>
4	FFh	The "error" state is automatically assigned by the device (and the operating mode value is read only) when: <ul style="list-style-type: none"> <li>• an attempt is made to execute an unexpected command</li> </ul>
5	00h	This value causes an exit from the "error" state, after the error condition is acknowledged. The only transition is to the "ready" state

## Emergency messages

The module automatically sends emergency messages including error codes. The communication errors are described in CiA DS301 [1]. The error codes are expressed as a DEVICE SPECIFIC ERROR type of code. The codes indicating a specific condition are also inserted, following the table below:

Error code	Error
000000000	<b>No error</b> – This code is generated when exiting an error condition, to notify the end of one of the error states
000000007	<b>Error Wrong Command</b> – An attempt to execute a command from an illegal state

Emergency Message	0	1	2	3	4	5	6	7
	01h	FFh	21h	00h	00h	00h	00h	0yh
COB – ID = [entry 1014h] + NodeID								
								

## Parameter Store/Restore

This module allows parameters to be saved in a non volatile memory. In order to avoid storing parameters by mistake, storage is only executed when a specific signature is written to the appropriate subindex. The signature is “save”.

Similarly, the default values of parameters, according to the communication or device profile, are restored. On receipt of the correct signature in the appropriate subindex, the device restores the default parameters and then confirms the SDO transmission. The signature is “load”.

The new configuration becomes active after a reset, i.e. after a “Power OFF/Power ON cycle” or an NMT “Reset Node” message.

Byte	0	1	2	3	4	5	6	7
Store Parameter	22h	10h	10h	01h	73h	61h	76h	65h
COB – ID = 600h + NodeID								
Restore Parameter	22h	11h	10h	01h	6Ch	6Fh	61h	64h
COB – ID = 600h + NodeID								

## SDO Messages

The entries of a device Object Dictionary are accessed through SDO (Service Data Object) messages. The basic SDO messages are as follows, as based on the Client – Server request and response model:

Byte	0	1	2	3	4	5	6	7
Read request	40h	Index	Sub-Index	Reserved				
	COB – ID = 600h + NodeID							
Read response	4Fh	Index	Sub-Index	Data				
	COB – ID = 580h + NodeID							
Write request	22h	Index	Sub-Index	Data				
	COB – ID = 600h + NodeID							
Write response	60h	Index	Sub-Index	Reserved				
	COB – ID = 580h + NodeID							

## Reference documents

List of CiA documents to which the user should refer


- [1] CiA DS301 - CANopen Application Layer and Communication Profile
- [2] CiA DS401 - CANopen Device Profile: for generic I/O modules

## Accessories, Spare Parts and Warranty

Power Supply 45W 24Vdc 2A	AP-S2/AL-DR45-24
Power Supply 120W 24Vdc 5A	AP-S2/AL-DR120-24
Additional Terminal Block 2x11	AP-S2/TB-211-1
Female Plug 11 Screw clamp	AP-S2/SPINA-V11
Female Plug 11 Spring clamp	AP-S2/SPINA-M11
RJ45 terminated cable 14cm	AP-S2/LOCAL-BUS76
RJ45 terminated cable 22cm	AP-S2/LOCAL-BUS152
CAN Bus termination Adapter	AP-S2/TERM-CAN

**Warranty: 3 years excluding defects due to improper use**

## Object Dictionary (with default values)

 In order to configure the module, it is necessary to connect it to a PC with the CAN interface and the supervisory software installed. The configuration can be obtained by writing the desired values to the module's variables listed in the Object Dictionary.

### Object Dictionary structure

Index (hex)	Sub Index	Object	Name	Default [hex]	Type	Acc. Attr.	MO
1000		VAR	Device Type	00030191	UNSIGNED32	RO	M
1001		VAR	Error Register	00	UNSIGNED8	RO	M
1003		ARRAY	Predefined error field	00000000		RO	0
1005		VAR	COB-ID SYNC	00000080	UNSIGNED32	RW	0
1006		VAR	Communication cycle period	00000000	UNSIGNED32	RW	0
1007		VAR	Synchronous window length	00000000	UNSIGNED32	RW	0
1008		VAR	Manufacturer Device Name	"32TS"	Vis-String	const	0
1009		VAR	Manufacturer Hardware Version	"1.00"	Vis-String	const	0
100A		VAR	Manufacturer Software Version	"1.00"	Vis-String	const	0
100C		VAR	Guard Time	0000	UNSIGNED16	RW	0
100D		VAR	Life Time Factor	00	UNSIGNED8	RW	0
1010		ARRAY	Store Parameters				0
	00h	VAR	Largest subindex supported	01	UNSIGNED8	RO	
	01h	VAR	Save all parameters	03	UNSIGNED32	RW	
1011		ARRAY	Restore Default Parameters			RW	0
	00h	VAR	Largest subindex supported	01	UNSIGNED8	RO	
	01h	VAR	Restore all default param.	01	UNSIGNED32	RW	
1014		VAR	COB-ID EMCY	80+NodeID	UNSIGNED32	RW	0
1015		VAR	Inhibit Time EMCY	0000	UNSIGNED16	RW	0
1017		VAR	Producer heartbeat time	0000	UNSIGNED16	RW	0
1018		RECORD	Identity Object		Identity (23h)		M
	00h	VAR	Number of entries	01	UNSIGNED8	RO	
	01h	VAR	Vendor ID	000000E9	UNSIGNED32	RO	
1200		RECORD	Server SDO Parameters		SDO Param (22h)		0
	00h	VAR	Number of entries	02	UNSIGNED8	RO	
	01h	VAR	COB-ID Client -> Server	600+NodeID	UNSIGNED32	RO	
	02h	VAR	COB-ID Server -> Client	580+NodeID	UNSIGNED32	RO	
1400		RECORD	1st Receive PDO Comm Param.		PDO CommPar (20h)		M
	00h	VAR	Largest subindex supported	02	UNSIGNED8	RO	
	01h	VAR	COB-ID used	200+NodeID	UNSIGNED32	RW	
	02h	VAR	Transmission type	FF	UNSIGNED8	RW	
1600		RECORD	1st Receive PDO Mapping		PDO Mapping (21h)		M
	00h	VAR	N° of mapped application obj	02	UNSIGNED8	RO	
	01h	VAR	DigOutput8_1	62000108	UNSIGNED32	RO	
	02h	VAR	DigOutput8_2	62000208	UNSIGNED32	RO	
1800		RECORD	1st Transmit PDO Comm Param.		PDO CommPar (20h)		M
	00h	VAR	Largest subindex supported	05	UNSIGNED8	RO	
	01h	VAR	COB-ID used	180+NodeID	UNSIGNED32	RW	
	02h	VAR	Transmission type	FF	UNSIGNED8	RW	
	03h	VAR	Inhibit time	0000	UNSIGNED16	RW	
	04h	VAR	Reseved		UNSIGNED8	RW	
	05h	VAR	Event timer	0000	UNSIGNED16	RW	
1A00		RECORD	1st Transmit PDO Mapping		PDO Mapping (21h)		M
	00h	VAR	N° of mapped application obj	02	UNSIGNED8	RO	
	01h	VAR	DigInput8_1	60000108	UNSIGNED32	RO	
	02h	VAR	DigInput8_2	60000208	UNSIGNED32	RO	
2004		ARRAY	Filter Constant				0
	00h	VAR	NrOfObjects	10	UNSIGNED8	RO	
	01h	VAR	Filter Constant 1	00	UNSIGNED8	RW	
	02h	VAR	Filter Constant 2	00	UNSIGNED8	RW	
	03h	VAR	Filter Constant 3	00	UNSIGNED8	RW	
	04h	VAR	Filter Constant 4	00	UNSIGNED8	RW	
	05h	VAR	Filter Constant 5	00	UNSIGNED8	RW	
	06h	VAR	Filter Constant 6	00	UNSIGNED8	RW	
	07h	VAR	Filter Constant 7	00	UNSIGNED8	RW	
	08h	VAR	Filter Constant 8	00	UNSIGNED8	RW	
	09h	VAR	Filter Constant 9	00	UNSIGNED8	RW	
	0Ah	VAR	Filter Constant 10	00	UNSIGNED8	RW	
	0Bh	VAR	Filter Constant 11	00	UNSIGNED8	RW	
	0Ch	VAR	Filter Constant 12	00	UNSIGNED8	RW	
	0Dh	VAR	Filter Constant 13	00	UNSIGNED8	RW	
	0Eh	VAR	Filter Constant 14	00	UNSIGNED8	RW	
	0Fh	VAR	Filter Constant 15	00	UNSIGNED8	RW	
	10h	VAR	Filter Constant 16	00	UNSIGNED8	RW	
200C		VAR	Operating Mode	01	UNSIGNED8	RW	0
3000		VAR	Node Address	7F	UNSIGNED8	RO	0
3001		VAR	Node Baudrate	01	UNSIGNED8	RO	0

Index (hex)	Sub Index	Object	Name	Default [hex]	Type	Acc. Attr.	MO
6000		ARRAY	Read Input 8-bit				M
	00h	VAR	Number of Elements	02	UNSIGNED8	RO	
	01h	VAR	DigInput8_1	00	UNSIGNED8	RO	
	02h	VAR	DigInput8_2	00	UNSIGNED8	RO	
6002		ARRAY	Polarity Input 8-bit				0
	00h	VAR	Number of Elements	02	UNSIGNED8	RO	
	01h	VAR	Polarity8_1	00	UNSIGNED8	RW	
	02h	VAR	Polarity8_2	00	UNSIGNED8	RW	
6003		ARRAY	Filter Constant Input 8-bit				0
	00h	VAR	Number of Elements	02	UNSIGNED8	RO	
	01h	VAR	FilterConst8_1	00	UNSIGNED8	RW	
	02h	VAR	FilterConst8_2	00	UNSIGNED8	RW	
6005		VAR	Global Interrupt Enable Digital	TRUE	BOOLEAN	RW	0
6006		ARRAY	Interrupt Mask Any Change 8-bit				0
	00h	VAR	Number of Elements	02	UNSIGNED8	RO	
	01h	VAR	InterruptAnyChange8_1	FF	UNSIGNED8	RW	
	02h	VAR	InterruptAnyChange8_2	FF	UNSIGNED8	RW	
6007		ARRAY	Interrupt Mask Low to High 8-bit				0
	00h	VAR	Number of Elements	02	UNSIGNED8	RO	
	01h	VAR	InterruptLowToHigh8_1	00	UNSIGNED8	RW	
	02h	VAR	InterruptLowToHigh8_2	00	UNSIGNED8	RW	
6008		ARRAY	Interrupt Mask High to Low 8-bit				0
	00h	VAR	Number of Elements	02	UNSIGNED8	RO	
	01h	VAR	InterruptHighToLow8_1	00	UNSIGNED8	RW	
	02h	VAR	InterruptHighToLow8_2	00	UNSIGNED8	RW	
6200		ARRAY	Write Output 8-Bit				M
	00h	VAR	Number of Elements	02	UNSIGNED8	RO	
	01h	VAR	DigOutput8_1	00	UNSIGNED8	RW	
	02h	VAR	DigOutput8_2	00	UNSIGNED8	RW	
6202		ARRAY	Polarity Output 8-Bit				0
	00h	VAR	Number of Elements	02	UNSIGNED8	RO	
	01h	VAR	Polarity8_1	00	UNSIGNED8	RW	
	02h	VAR	Polarity8_2	00	UNSIGNED8	RW	
6206		ARRAY	Error Mode Output 8-Bit				0
	00h	VAR	Number of Elements	02	UNSIGNED8	RO	
	01h	VAR	ErrorMode8_1	FF	UNSIGNED8	RW	
	02h	VAR	ErrorMode8_2	FF	UNSIGNED8	RW	
6207		ARRAY	Error Value Output 8-Bit				0
	00h	VAR	Number of Elements	02	UNSIGNED8	RO	
	01h	VAR	ErrorValue8_1	00	UNSIGNED8	RW	
	02h	VAR	ErrorValue8_2	00	UNSIGNED8	RW	
6208		ARRAY	Filter Mask Output 8-Bit				0
	00h	VAR	Number of Elements	02	UNSIGNED8	RO	
	01h	VAR	FilterMask8_1	FF	UNSIGNED8	RW	
	02h	VAR	FilterMask8_2	FF	UNSIGNED8	RW	