Ascon J5 Pressure Indicator

Simplified Calibration Procedure

HOME DISPLAY

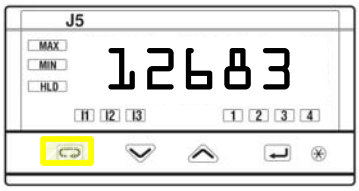

ENTER CALIBRATION MODE

PASSWORD REQUIRED

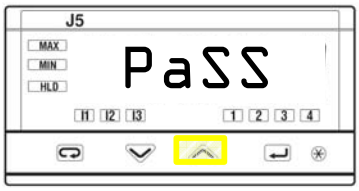

PASSWORD ENTRY

FACTORY DEFAULT (3333 OR 33)

TARE CALIBRATION HEADING (weigh scales)

TRANSDUCER CALIBRATION HEADING (pressure)

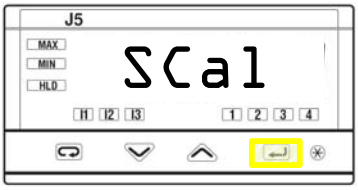

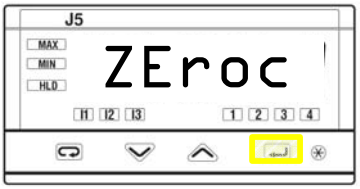

TRANSDUCER CALIBRATION START

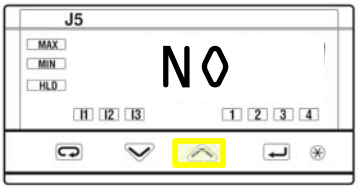

YES / NO SELECTION (select YES)

YES / NO SELECTION

The following will appear

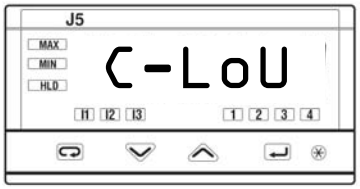

After a few seconds, the CAL LOW is complete and the following will appear

After a few seconds, the CAL HI is complete and you will see a momentary flash of the following
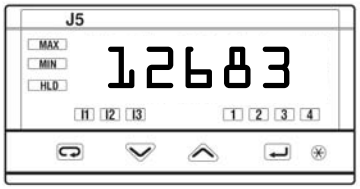
The DISPLAY will now return to the Pressure Reading